

INSTALLATION MANUAL

Four-way Cassette Type

Thank you very much for purchasing our air conditioner,
Before using your air conditioner, please read this manual carefully and keep it for future reference.

PRECAUTIONS.....	1
INSTALLATION INFORMATION.....	2
ATTACHED FITTINGS.....	3
INDOOR UNIT INSTALLATION.....	4
OUTDOOR UNIT INSTALLATION.....	7
INSTALL THE CONNECTING PIPE.....	8
CONNECT THE DRAIN PIPE.....	11
CONTROL FOR MODEL 12.....	12
CONTROL FOR MODEL 18-48.....	12
WIRING.....	13
TEST OPERATION.....	14

1. PRECAUTIONS

- Be sure to be in conformity with the local, national and international laws and regulations.
- Read "PRECAUTIONS" carefully before installation.
- The following precautions include important safety items. Observe them and never forget.
- Keep this manual with the owner's manual in a handy place for future reference.

The safety precautions listed here are divided into two categories. In either case, important safety information is listed which must be read carefully.



WARNING

Failure to observe a warning may result in death.



CAUTION

Failure to observe a caution may result in injury or damage to the equipment.

After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained. Also, inform customers that they should store this installation manual along with the owner's manual for future reference.



WARNING

Be sure only trained and qualified service personnel to install, repair or service the equipment.

Improper installation, repair, and maintenance may result in electric shocks, short-circuit, leaks, fire or other damage to the equipment.

Install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock and fire.

When installing the unit in a small room, take measures against to keep refrigerant concentration from exceeding allowable safety limits in the event of refrigerant leakage. Contact the place of purchase for information. Excessive refrigerant in a closed ambient can lead to oxygen deficiency.

Use the attached accessories parts and specified parts for installation. otherwise, it will cause the set to fall, water leakage, electrical shock fire.

Install at a strong and firm location which is able to withstand the set's weight. If the strength is not enough or installation is not properly done, the set will drop to cause injury.

The appliance must be installed 2.3m above floor.

The appliance shall not be installed in the laundry.

Before obtaining access to terminals, all supply circuits must be disconnected.

The appliance must be positioned so that the plug is accessible.

The enclosure of the appliance shall be marked by word, or by symbols, with the direction of the fluid flow.

For electrical work, follow the local national wiring standard, regulation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect in electrical work, it will cause electrical shock and fire.

Use the specified cable and connect tightly and clamp the cable so that no external force will be acted on the terminal. If connection or fixing is not perfect, it will cause heat-up or fire at the connection.

Wiring routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause heat-up at connection point of terminal, fire or electrical shock.

If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly qualified person in order to avoid a hazard.

An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.

When carrying out piping connection, take care not to let air substances go into refrigeration cycle. Otherwise, it will cause lower capacity, abnormal high pressure in the refrigeration cycle, explosion and injury.

Do not modify the length of the power supply cord or use of extension cord, and do not share the single outlet with other electrical appliances. Otherwise, it will cause fire or electrical shock.

The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.

Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes.

Improper installation work may result in the equipment falling and causing accidents.

If the refrigerant leaks during installation, ventilate the area immediately.

Toxic gas may be produced if the refrigerant comes into the place contacting with fire.

After completing the installation work, check that the refrigerant does not leak.

Toxic gas may be produced if the refrigerant leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.



CAUTION

Ground the air conditioner.

Do not connect the ground wire to gas or water pipes, lightning rod or a telephone ground wire. Incomplete grounding may result in electric shocks.

Be sure to install an earth leakage breaker.

Failure to install an earth leakage breaker may result in electric shocks.

Connect the outdoor unit wires, then connect the indoor unit wires.

You are not allowed to connect the air conditioner with the power source until wiring and piping the air conditioner is done.

While following the instructions in this installation manual, install drain piping in order to ensure proper drainage and insulate piping in order to prevent condensation.

Improper drain piping may result in water leakage and property damage.

Install the indoor and outdoor units, power supply wiring and connecting wires at least 1 meter away from televisions or radios in order to prevent image interference or noise.

Depending on the radio waves, a distance of 1 meter may not be sufficient enough to eliminate the noise.

The appliance is not intended for use by young children or infirm persons without supervision.

Don't install the air conditioner in the following locations:

- There is petrolatum existing.
- There is salty air surrounding (near the coast).
- There is caustic gas (the sulfide, for example) existing in the air (near a hot spring).
- The Volt vibrates violently (in the factories).
- In buses or cabinets.
- In kitchen where it is full of oil gas.
- There is strong electromagnetic wave existing.
- There are inflammable materials or gas.
- There is acid or alkaline liquid evaporating.
- Other special conditions.

2. INSTALLATION INFORMATION

To install properly, please read this "installation manual" at first.

The air conditioner must be installed by qualified persons.

When installing the indoor unit or its tubing, please follow this manual as strictly as possible.

If the air conditioner is installed on a metal part of the building, it must be electrically insulated according to the relevant standards to electrical appliances.

When all the installation work is finished, please turn on the power only after a thorough check.

Regret for no further announcement if there is any change of this manual caused by product improvement.














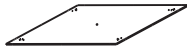


 
INSTALLATION ORDER

- Select the location;
- Install the indoor unit;
- Install the outdoor unit;
- Install the connecting pipe ;
- Connect the drain pipe;
- Wiring;
- Test operation.

3. ATTACHED FITTINGS

Please check whether the following fittings are of full scope. If there are some spare fittings, please restore them carefully.

Table 3-1

	NAME	SHAPE	QUANTITY
INSTALLATION FITTINGS	1. Expansible hook		4
	2. Installation hook		4
	3. Installation paper board		1
	4. Bolt M5		4
Tubing & Fittings	5. Connecting pipe group		1
	6. Binding tape		6
	7. Soundproof / insulation sheath		2
Drainpipe Fittings	8. Out-let pipe sheath		1
	9. Out-let pipe clasp		1
	10. Tightening band		20
	11. Drain joint		1
	12. Seal ring		1
Protect Pipe Fittings	13. Wall conduit		1
	14. Wall conduit cover		1
	15. Remote controller		1
	16. Remote controller holder		1
Remote controller & Its Frame	17. Mounting screw(ST2.9 × 10-C-H)		2
	18. Alkaline dry batteries (AM4)		2
Others	19. Owner's manual		1
	20. Installation manual		1
	21. Net work winding		1

Cautions on remote controller installation:

- Never throw or beat the controller.
- Before installation, operate the remote controller to determine its location in a reception range.
- Keep the remote controller at least 1m apart from the nearest TV set or stereo equipment. (it is necessary to prevent image disturbances or noise interferences.)
- Do not install the remote controller in a place exposed to direct sunlight or close to a heating source, such as a stove.
- Note that the positive and negative poles are right positions when loading batteries.
- This manual is subject to changes due to technological improvement without further notices.

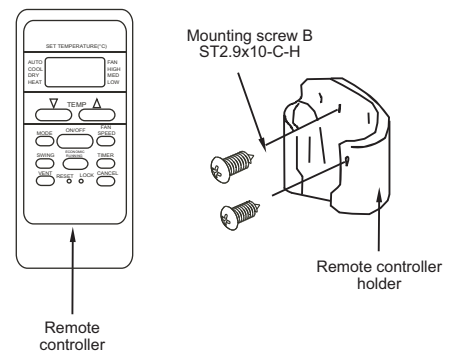


Fig.3-1

4. INDOOR UNIT INSTALLATION

4.1 FIGURES 1

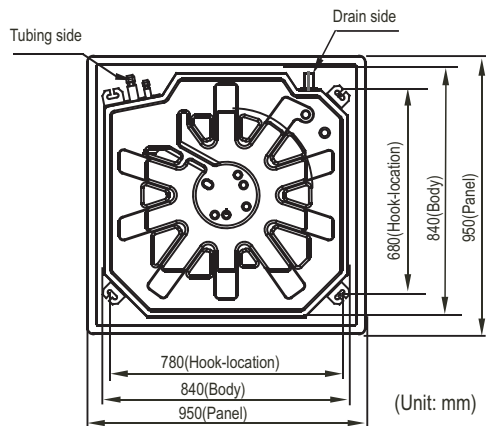


Fig. 4-1

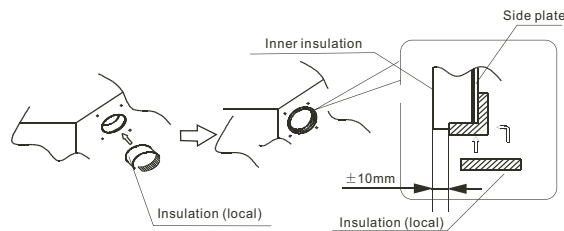


Fig. 4-5

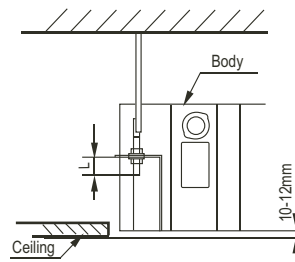


Fig. 4-6

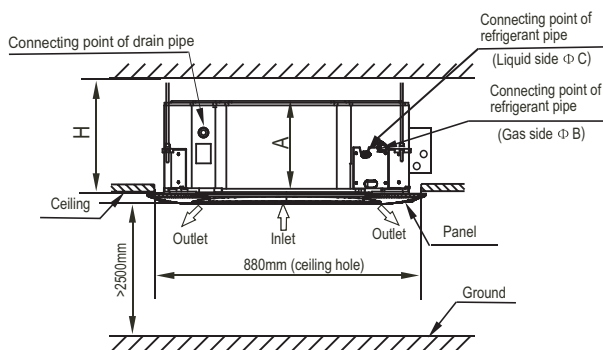


Fig. 4-2

Table 4-1

MODEL	A	B	C	H	REMARK
18	230	∅12.7	∅6.4	>260	
24	230	∅15.9	∅9.5	>260	
	300	∅15.9	∅9.5	>330	MCA-24HRDN1-C1
30	300	∅15.9	∅9.5	>330	
36	300	∅15.9	∅9.5	>330	
48	300	∅15.9	∅9.5	>330	

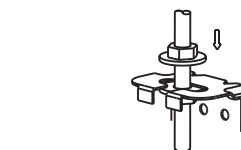


Fig. 4-7

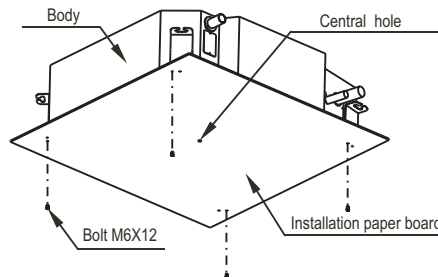


Fig. 4-8

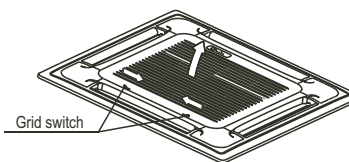


Fig. 4-9

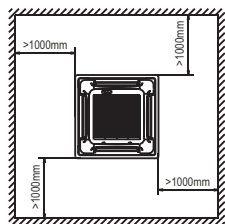


Fig. 4-3

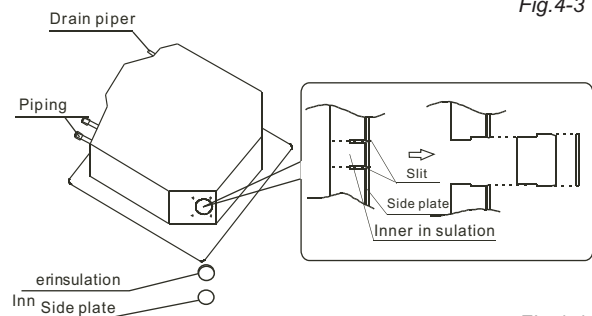


Fig. 4-4

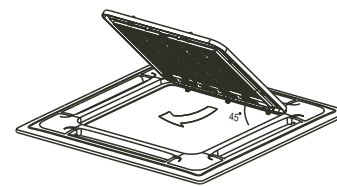


Fig. 4-10

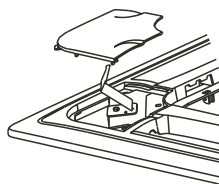


Fig. 4-11



NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased (depend on model). The actual shape shall prevail.

4.2 THE OTHER ONE STRUCTURE FOR MODEL 12-18

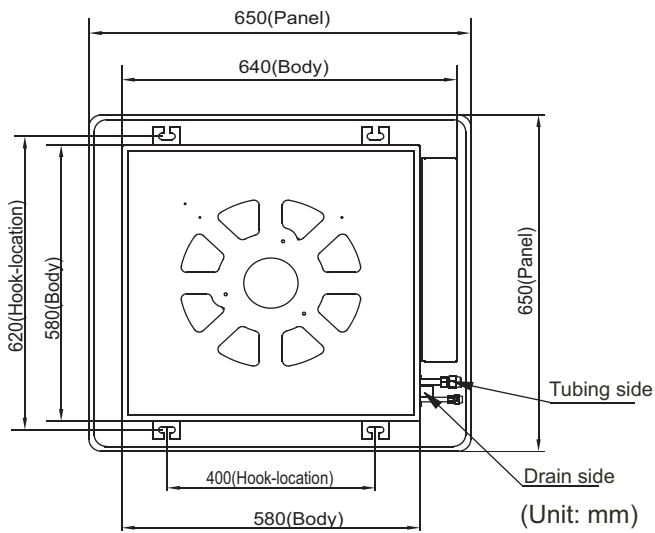


Fig. 4-12

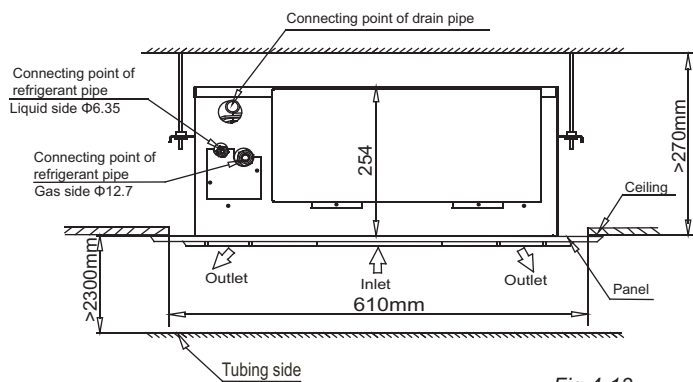


Fig. 4-13

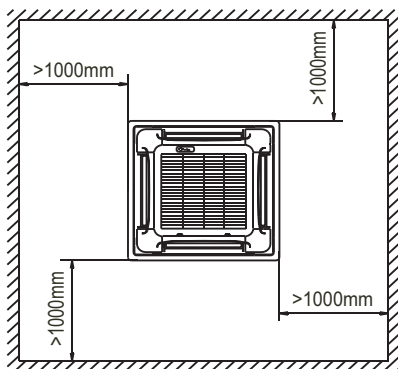


Fig. 4-14

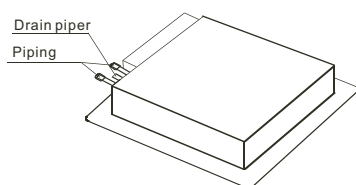


Fig. 4-15

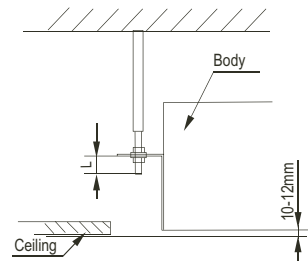


Fig. 4-16

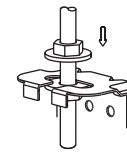


Fig. 4-17

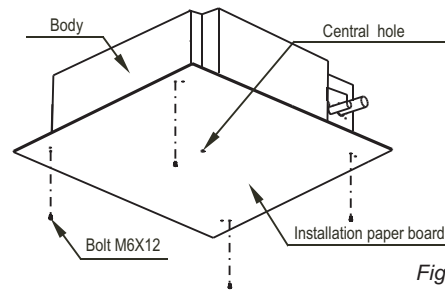


Fig. 4-18

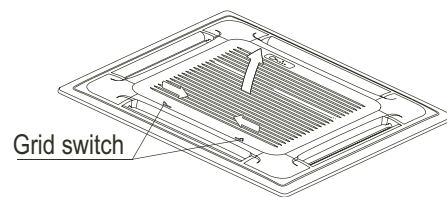


Fig. 4-19

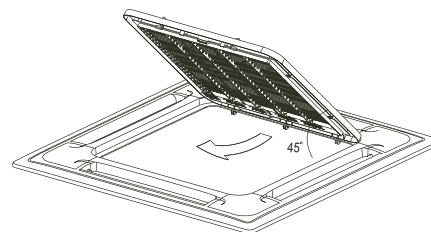


Fig. 4-20

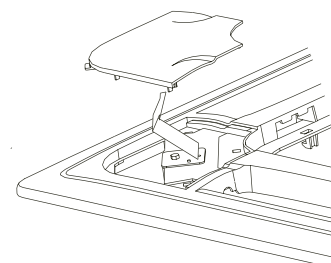


Fig. 4-21



NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased(depend on model).The actual shape shall prevail.

4.3 FIGURES 2

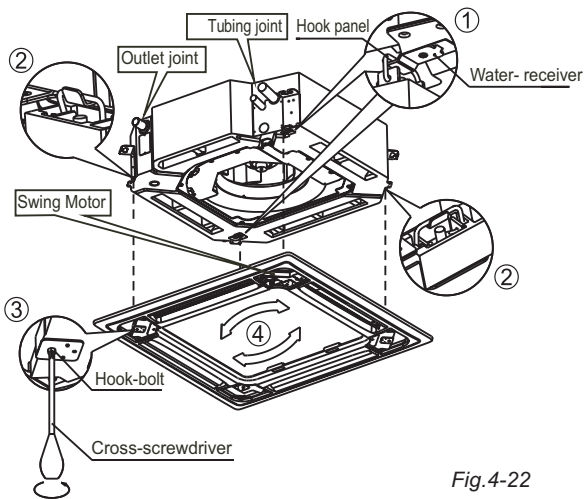


Fig.4-22



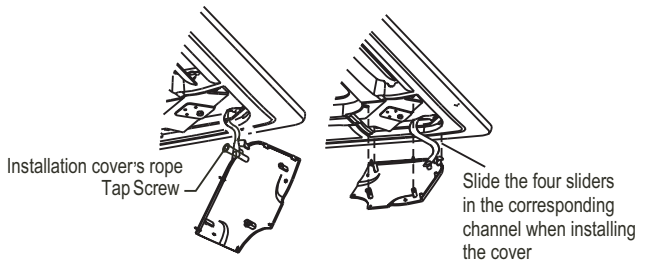



Fig.4-26

 

a ○

 

b ×

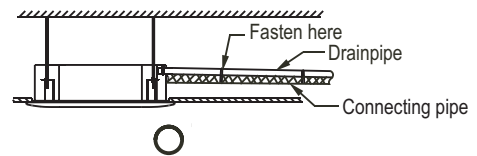

○

Fig.4-27

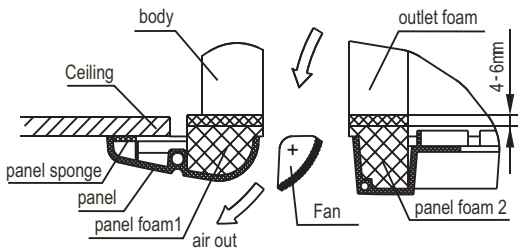


Fig.4-23

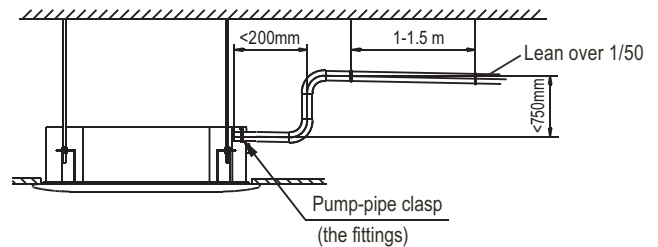


Fig.4-28

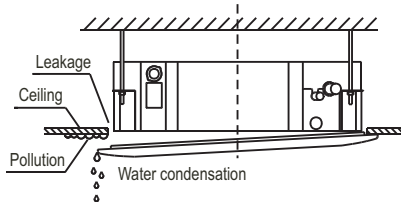


Fig.4-24

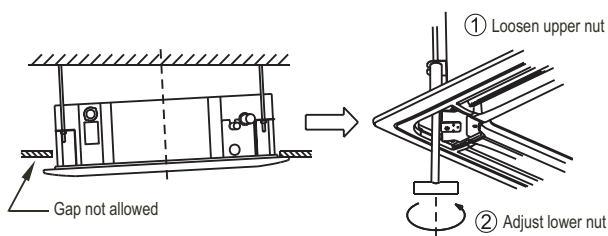


Fig. 4-25

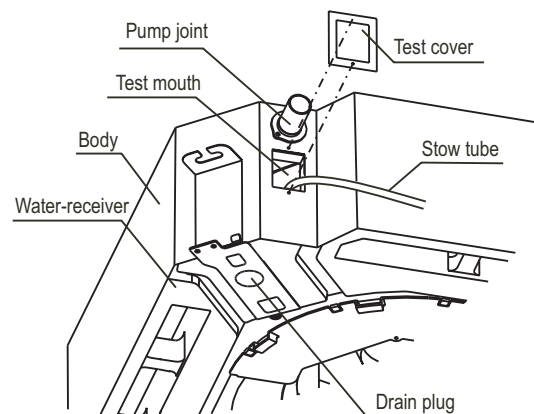


Fig.4-29



NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased (depend on model). The actual shape shall prevail.

4.4 Install The Panel



CAUTION

Never put the panel face down on floor or against the wall, or on bulgy objects.

Never crash or strike it.

1 Remove the air-in grill.

- Slide two grill switches toward the middle at the same time, and then pull them up. (Refer to Fig.4-9)
- Draw the grill up to an angle of about 45°, and remove it. (Refer to Fig.4-10)

2 Remove the installation covers at the four corners

- Wrench off the bolts, loose the rope of the installation covers, and remove them. (Refer to Fig.4-11)

3 Install the panel

- Align the swing motor on the panel to the tubing joints of the body properly. (Refer to Fig.4-22)
- Fix hooks of the panel at swing motor and its opposite sides to the hooks of corresponding water receiver. (Refer to Fig.4-22.1) Then hang the other two panel hooks onto corresponding hangers of the body. (Refer to Fig.4-22.2)



CAUTION

Do not coil the wiring of the swing motor into the seal sponge.

- Adjust the four panel hook screws to keep the panel horizontal, and screw them up to the ceiling evenly. (Refer to Fig.4-22.3)
 - Regulate the panel in the direction of the arrow in Fig.4-12 slightly to fit the panel's center to the center of the ceiling's opening. Guarantee that hooks of four corners are fixed well.
 - Keep fastening the screws under the panel hooks, until the thickness of the sponge between the body and the panel's outlet has been reduced to about 4~6mm. The edge of the panel should contact with the ceiling well. (Refer to Fig.4-23)
 - Malfunction described in Fig.4-24 can be caused by inappropriate tightness the screw.
 - If the gap between the panel and ceiling still exists after fastening the screws, the height of the indoor unit should be modified again. (Refer to Fig.4-25-left)
 - You can modify the height of the indoor unit through the openings on the panel's four corners, if the lift of the indoor unit and the drainpipe is not influenced (refer to Fig.4-26-right).
- #### 4 Hang the air-in grill to the panel, then connect the lead terminator of the swing motor and that of the control box with corresponding terminators on the body respectively.
- #### 5 Relocate the air-in grill in the procedure of reversed order.
- #### 6 Relocate the installation cover.
- Fasten the rope of installation cover on the bolt of the installation cover. (Refer to Fig.4-26-left)
 - Press the installation cover into the panel slightly. (Refer to Fig.4-26-right)

5. OUTDOOR UNIT INSTALLATION

5.1 Installation Place

■ The outdoor unit should be installed in the location that meets the following requirements:

- There is enough room for installation and maintenance.
- The air outlet and the air inlet are not impeded, and can not be reached by strong wind.
- It must be a dry and well ventilating place.
- The support is flat and horizontal and can stand the weight of the outdoor unit. And will no additional noise or vibration.
- Your neighborhood will not feel uncomfortable with the noise or expelled air.
- It is easy to install the connecting pipes or cables.
- Determine the air outlet direction where the discharged air is not blocked.
- There is no danger of fire due to leakage of inflammable gas.
- The piping length between the outdoor unit and the indoor unit may not exceed the allowable piping length.
- In the case that the installation place is exposed to strong wind such as a seaside, make sure the fan operating properly by putting the unit lengthwise along the wall or using a dust or shield. (Refer to Fig.5-1)
- If possible, do not install the unit where it is exposed to direct sunlight.
- If necessary, install a blind that does not interfere with the air flow.
- During the heating mode, the water drained off the outdoor unit, The condensate should be well drained away by the drain hole to an appropriate place, so as not to interfere other people.
- Select the position where it will not be subject to snow drifts, accumulation of leaves or other seasonal debris. If unavoidable, please cover it with a shelter.
- Locate the outdoor unit as close to the indoor unit as possible.
- If possible, please remove the obstacles nearby to prevent the performance from being impeded by too little of air circulation.
- The minimum distance between the outdoor unit and obstacles described in the installation chart does not mean that the same is applicable to the situation of an airtight room. Leave open two of the three directions (M,N,P) (Refer to Fig.5-5)




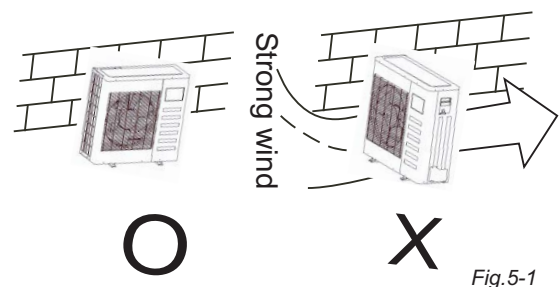


Fig.5-1

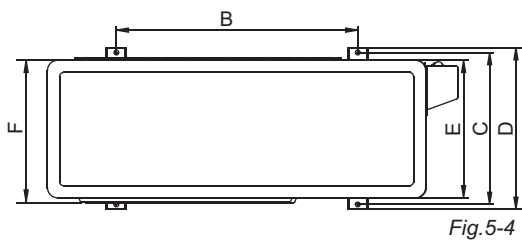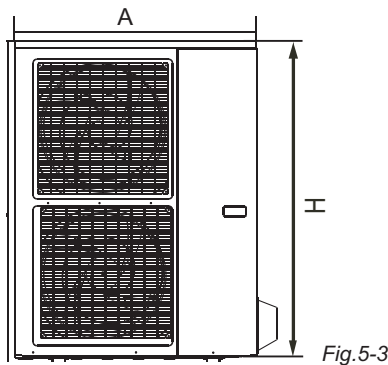


NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased (depend on model). The actual shape shall prevail.

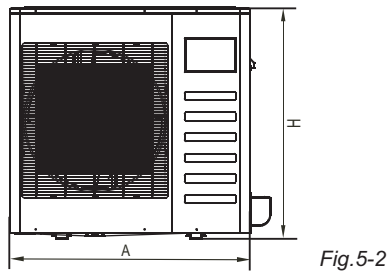

- Never hold the inlet of the outdoor unit to prevent it from deforming.
- Do not touch the fan with hands or other objects.
- Do not lean it more than 45°, and do not lay it sidelong.
- Make concrete foundation according to the specifications of the outdoor units. (Refer to Fig.5-6)
- Fasten the feet of this unit with bolts firmly to prevent it from collapsing in case of earthquake or strong wind. (Refer to Fig.5-6)

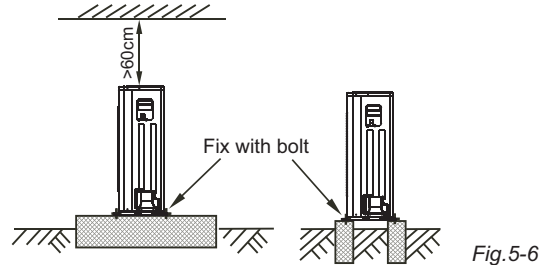


NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased (depend on model). The actual shape shall prevail.

Table 5-1 mm

MODEL	A	B	C	D	E	F	H	REMARK
12	780	548	266	300	241	250	547	R410A (Fig.5-2)
18	842	560	335	360	312	324	685	
24	895	590	333	355	302	313	862	
24 (60Hz)	990	624	366	396	340	354	966	
30	990	624	366	396	340	354	966	
36	940	600	376	400	340	354	1245	R410A (Fig.5-3)
36 (60Hz)	940	600	376	400	340	354	1245	
48	940	600	376	400	340	354	1245	

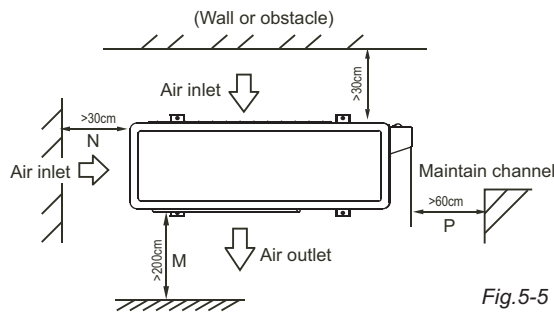

NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased (depend on model). The actual shape shall prevail.

5.2 Moving and installation

- Since the gravity center of the unit is not at its physical center, so please be careful when lifting it with a sling.

6. INSTALL THE CONNECTING PIPE

Check whether the height drop between the indoor unit and outdoor unit, the length of refrigerant pipe, and the number of the bends meet the following requirements:

Table 6-1

MODEL	The max height drop(m)		The length of refrigerant pipe(m)	The number of bends
	When outdoor unit is top	When outdoor unit is bottom		
12	6	5	10	Less than 10
18	12	9	25	
24	12	9	25	
24(60Hz)1-Phase	15	9	25	
30 1-Phase	15	9	25	
30 3-Phase	20	12	30	
36 1-Phase	20	12	30	
36 3-Phase	20	12	30	
36(60Hz)1-Phase	20	12	30	
48 1-Phase	25	20	50	
48 3-Phase	30	20	50	

6.1 The Procedure of Connecting Pipes



CAUTION

All field piping must be provided by a licensed refrigeration technician and must comply with the relevant local and national codes.

Do not let air, dust, or other impurities fall in the pipe system during the time of installation.

The connecting pipe should not be installed until the indoor and outdoor units have been fixed already.

Keep the connecting pipe dry, and do not let moisture in during installation.

Execute heat insulation work completely on both sides of the gas piping and the liquid piping. Otherwise, this can sometimes result in water leakage.

- 1 Drill a hole in the wall (suitable just for the size of the wall conduit), then set on the fittings such as the wall conduit and its cover.
- 2 Bind the connecting pipe and the cables together tightly with binding tapes.
Pass the bound connecting pipe through the wall conduct from outside. Be careful of the pipe allocation to do on damage to the tubing.
- 3 Connect the pipes. Refer to "How to Connect the pipes" for details.
- 4 Expel the air with a vacuum pump. Refer to "How to expel the air with a vacuum pump" for details.
- 5 open the stop valves of the outdoor unit to make the refrigerant pipe connecting the indoor unit with the outdoor unit in fluent flow.
- 6 Check the leakage. Check all the joints with the leak detector or soap water.
- 7 Cover the joints of the connecting pipe with the soundproof / insulating sheath (fittings), and bind it well with the tapes to prevent leakage.



CAUTION

Be sure to with insulating materials cover all the exposed parts of the flare pipe joints and refrigerant pipe on the liquid-side and the gas-side. Ensure that there is no gap between them.

Incomplete insulation may cause water condensation.

How to Connect the pipes

1 Flaring

- Cut a pipe with a pipe cutter. (refer to Fig.6-1)

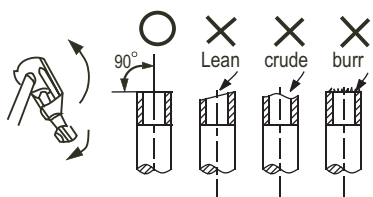


Fig.6-1

- Insert a flare nut into a pipe and flare the pipe.
- Refer to Table 6-2 for the dimension of flare nut spaces.

Table 6-2

Pipe gauge	Tightening torque (kgf·cm)	Flare dimension A (mm)		Flare shape
		min	max	
Ø6.4	14.2~17.2 N·m (144~176 kgf·cm)	8.3	8.3	
Ø9.5	32.7~39.9 N·m (333~407 kgf·cm)	12.0	12.4	
Ø12.7	49.5~60.3 N·m (504~616 kgf·cm)	15.4	15.8	
Ø15.9	61.8~75.4 N·m (630~770 kgf·cm)	18.6	19.0	
Ø19.1	97.2~118.6 N·m (990~1210 kgf·cm)	22.9	23.3	

2 Connect the indoor unit at first, then the outdoor unit.

- Bend the tubing in proper way. Do not harm to them.

Bend the pipe with thumb



min-radius 100mm

Fig.6-2

- The bending angle should not exceed 90.
- Bending position is preferably in the middle of the bendable pipe. The larger the bending radius the better it is.
- Do not bend the pipe more than three times.
- When connecting the flare nut, coat the flare both inside and outside with either oil or ester oil and initially tighten by hand 3 or 4 turns before tightening firmly.

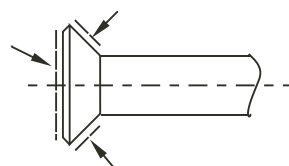


Fig.6-3

- Be sure to use both a spanner and torque wrench together when connecting or disconnecting pipes to /from the unit. (Fig.6-4)

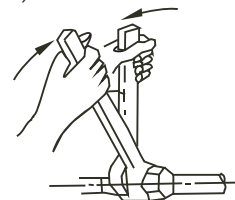


Fig.6-4



CAUTION

Too large torque will harm the bellmouthing and too small will cause leakage. Please determine the torque according to Table 6-2.

After the connecting work is finished, be sure to check that there is no gas leak.

How to expel the air with a vacuum pump

- Stop valve operation introduction

1. Opening stop valve

- 1) Remove the cap and turn the valve counterclockwise with the hexagon wrench.
- 2) Turn it until the shaft stops. Do not apply excessive force to the stop valve. Doing so may break the valve body, as the valve is not a backseat type. Always use the special tool.
- 3) Make sure to tighten the cap securely.

2. Closing stop valve

- 1) Remove the cap and turn the valve clockwise with the hexagon wrench.
- 2) Securely tighten the valve until the shaft contacts the main body seal.

Make sure to tighten the cap securely.
For the tightening torque, refer to the table below.

Table 6-3

Tightening torque N.M (Turn clockwise to close)				
Stop Valve size	Shaft (valve body)		Cap (Valve lid)	Maintenance nut
Ø6.4	5.4~6.6	Hexagonal wrench 4 mm	13.5~16.5	11.5~13.9
Ø9.5			18~22	
Ø12.7	8.1~9.9	Hexagonal wrench 6 mm	23~27	
Ø15.9	13.5~16.5		36~44	
Ø22.2	27~33	Hexagonal wrench 10 mm		
Ø25.4				



CAUTION

Always use a charge hose for service port connection.

After tightening the cap, check that no refrigerant leaks are present.

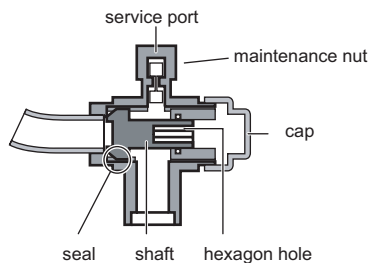


Fig. 6-5

Using the vacuum pump

- Loosen and remove the maintenance nuts of stop valves A and B, and connect the charge hose of the manifold valve to the service port of stop valve A. (Be sure that stop valves A and B are both closed)
- Connect the joint of the charge hose with the vacuum pump.
- Open the Lo-lever of the manifold valve completely.
- Turn on the vacuum pump. At the beginning of pumping, loosen the maintenance nut of stop valve B a little to check whether the air comes in (the sound of the pump changes, and the indicator of compound meter turns below zero). Then fasten the maintenance nut.
- When the pumping has finished, close the Lo-lever of the manifold valve completely and turn off the vacuum pump. Make pumping for 15 minutes or more and check that the compound meter indicates -76cmHg(-1X10⁵Pa)
- Loosen and remove the cap of stop valves A and B to open stop valve A and B completely, then fasten the cap.
- Disassemble the charge hose from the service port of stop valve A, and fasten the nut.

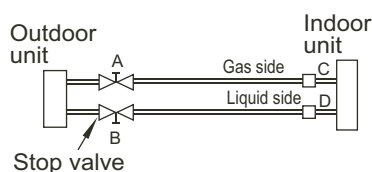


Fig. 6-6

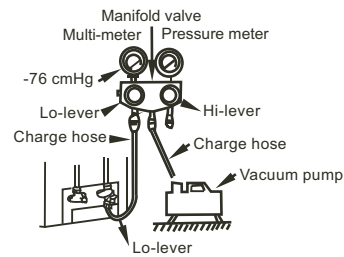


Fig. 6-7

6.2. Refrigerant pipe installation



CAUTION

- Ventilate the air if there was any refrigerant leakage during the installation. Leaked refrigerant will generate poisonous gas if meeting fire.
- Make sure there is no refrigerant leakage after the installation. Leaked refrigerant will generate poisonous gas if meeting fire.

Allowed Length and Drop of Pipes

Requirements are different when installing the outdoor unit, please refer to outdoor unit installation manual for detailed information.

Material and Size of the Pipes

Three length(3m,5m,10m)of pipes are available to purchase.

Table 6-4

Pipe Material	Copper Pipe for Air Conditioner			
	MODEL	12	18	24-48
Size(mm)	Gas side	Ø12.7	Ø12.7	Ø15.9
	Liquid side	Ø6.4	Ø6.4	Ø9.5

6.3 Additional Refrigerant Charge



CAUTION

Refrigerant cannot be charged until field wiring has been completed.

Refrigerant may only be charged after performing the leak test and the vacuum pumping.

When charging a system, care shall be taken that its maximum permissible charge is never exceeded, in view of the danger of liquid hammer.

Charging with an unsuitable substance may cause explosions and accidents, so always ensure that the appropriate refrigerant is charged.

Refrigerant containers shall be opened slowly.

Always use protective gloves and protect your eyes when charging refrigerant.

The outdoor unit is factory charged with refrigerant. Some systems require additional charging of refrigerant depending on pipe lengths. The additional refrigerant to be charged can be calculated from the following formule:

$$R = T \times (L-5)m$$

R(g): Additional refrigerant to be charged
 L(m): The length of the liquid pipe
 T(g): The quantity of the charged refrigerant per meter

Table 6-5

MODEL	12	18	24	30	36	48
T (g)	11	11	30	30	30	30



NOTE

If a negative result is gotten for R from the formule at right, no refigam needs to be added nor removed.

7. CONNECT THE DRAIN PIPE

■ Install the drainpipe of the indoor unit

- You can use a polyethylene tube as the drainpipe (out-dia.37-39mm, in-dia.32mm). It could be bought at local market or from your dealer.
- Set the mouth of the drainpipe onto the root of the body's pump-pipe, and clip the drainpipe and the out-let pipe sheath (fittings) together firmly with the out-let pipe clasp (fitting).
- The body's pump pipe and the drainpipe (especially the indoor part) should be covered evenly with the out-let pipe sheath (fittings) and be bound tightly with the constrictor to prevent condensation caused by entered air.
- To prevent water from flowing backwards into the air conditioner while the air conditioner stops, please lean the drainpipe down toward outdoor (outlet-side) at a degree of over 1/ 50. And please avoid any bulge or water deposit. (Refer to Fig.4-27.a in the figure page)
- Do not drag the drainpipe violently when connecting to prevent the body from being pulled. Meanwhile, one supportpoint should be set every 1~1.5m to prevent the drainpipe from yielding (Refer to Fig.4-27.a in the figure page). Or you can tie the drainpipe with the connecting pipe to fix it.(Refer to Fig.4-27.c in the figure page)
- In the case of prolonged drainpipe, you had better tighten its indoor part with a protection tube to prevent it from loosing.
- If the outlet of the drainpipe is higher than the body's pump joint, the pipe should be arranged as vertically as possible. And the lift distance must be less than 200mm, otherwise the water will overflow when the air conditioner stops.(Refer to Fig.4-28 in the figure page)
- The end of the drainpipe should be over 50mm higher than the ground or the bottom of the drainage chute, and do not immerse it in water. If you discharge the water directly into sewage, be sure to make a U-form aquaseal by bending the pipe up to prevent the smelly gas entering the house through the drain pipe.

■ Drainage test

- Check whether the drainpipe is unhindered.
 - New built house should have this test done before paving the ceiling.
- Remove the test cover, and stow water of about 2000ml to the water receiver through the stow tube. (Refer to Fig.4-29 in the figure page)
 - Turn on the power, and operate the air conditioner under the "COOLING" mode. Listen to the sound of the drain pump. Check whether the water is discharger well (a lag of 1min is allowed before discharging, according to the length of the drain pipe), and check whether water leaks from the joints.
 - Stop the air conditioner, turn off the power, and reset the test cover to its original position.



NOTE

The drain plug is used to empty the water-receiver for maintenance of the air conditioner. Please stuff it imposition at all times during operation to avoid leakage.

■ Install the drain joint of the outdoor unit

Fit the seal into the drain joint, then insert the drain joint into the base pan hole of outdoor, rotate 90° to securely assemble them. Connect the drain joint with an extension drain hose (Locally purchased), in case of the condensate draining off the outdoor unit during the heating mode.

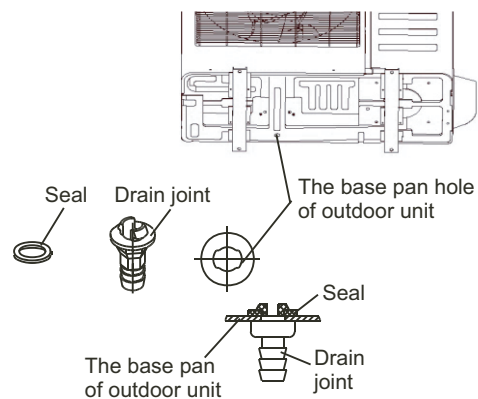


Fig.7-1



NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased(depend on model).The actual shape shall prevail.

8. CONTROL FOR MODEL 12

A part of unit have this function.

- The temperature compensation and the type of the air-conditioner can be set by the switches on the Main Control Board of the indoor unit.
- After the setting, be sure to cut down the main power supply switch, then turn it on again.
- Setting would be invalid without disconnecting the power.

8.1 Temperature compensation code set

The temperature compensation of the indoor unit can be set by code switch SW1 on the Main Control Board of indoor unit according to the below table.

Temp_compensation code

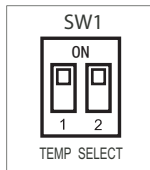


Table 8-1

Toggle switch set	Temperature Compensation
SW1	
	0°C
	2°C
	4°C
	6°C

8.2 Type Selection set

The type of indoor unit has been set before leaving the factory according to the below table.

Type_selection code

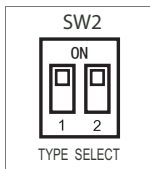


Table 8-2

SW2	Toggle switch set	Type Selection
Note: The type selection has been set before leaving the factory, anyone can't modify it except the maintenance person.		Q4(four-way cassette)
		T2(slim duct)

9. CONTROL FOR MODEL 18-48

- The capacity of the system and the network address of the air-conditioner can be set by the switches on the Main Control Board of the indoor unit.
- After the setting, be sure to cut down the main power supply switch, then turn it on again.
- Setting would be invalid without disconnecting the power.

9.1 Horsepower code set

The capacity of the indoor unit has been set before leaving the factory according to the below table.

Horsepower code

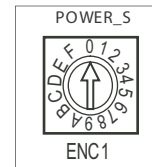


Table 9-1

ENC1	Toggle switch code	MODEL
Note: The capacity has been set before leaving the factory, anyone can't modify it except the maintenance person.	4	18
	5	24
	7	30
	8	36
	9	48

9.2 Network address set

Every air-conditioner in network has only one network address to distinguish each other. Address code of air-conditioner in LAN is set by code switches S1 & S2 on the Main Control Board of the indoor unit, and the set range is 0-63.

Table 9-2

Toggle switch set		Network address code
S1	S2	
		00~15
		16~31
		32~47
		48-63

10. WIRING



CAUTION

The air conditioner should use separate power supply with rated voltage.

The external power supply to the air conditioner should have ground wiring, which is linked to the ground wiring of the indoor and outdoor unit.

The wiring work should be done by qualified persons according to circuit drawing.

An all-pole disconnection device which has at least 3mm separation distance in all pole and a residual current device(RCD) with the rating of above 10mA shall be incorporated in the fixed wiring according to the national rule.

Be sure to locate the power wiring and the signal wiring well to avoid cross-disturbance.

Do not turn on the power until you have checked carefully after wiring.

10.1 Connect the cable

- Disassemble the bolts from the cover.(If there isn't a cover on the outdoor unit, disassemble the bolts from the maintenance board, and pull it in the direction of the arrow to remove the protection board.)
(Refer to Fig.10-1)
- Connect the connective cables to the terminals as identified with their respective matched numbers on the terminal block of indoor and outdoor units.
- Re-install the cover or the protection board.
- The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.

10.2 The Specification of Power

(Refer to Table10-1)

10.3 Wiring figure

(Refer to Fig.10-6~Fig.10-11)

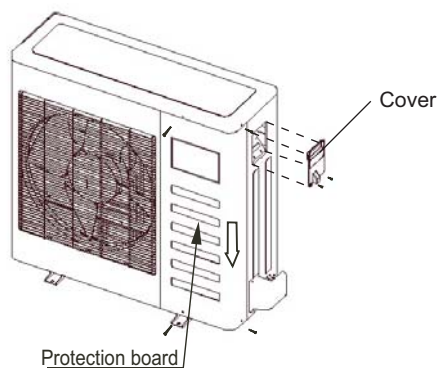


Fig.10-1



NOTE

All the pictures in this manual are for explanation purpose only. They may be slightly different from the air conditioner you purchased(depend on model).The actual shape shall prevail.

Single phase indoor unit

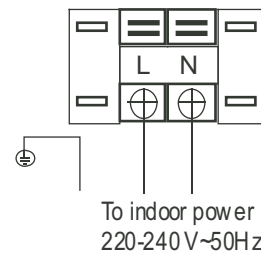


Fig.10-2

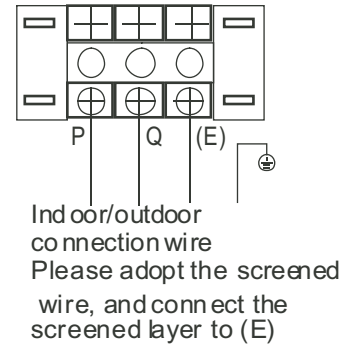


Fig.10-3

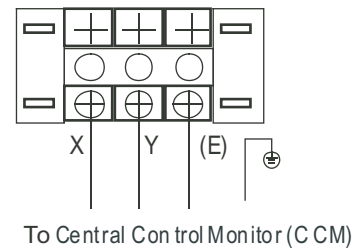


Fig.10-4

10.4 Outdoor unit

1. Remove the electric parts cover from the outdoor unit.
2. Connect the connective cables to the terminals as identified with their respective matched numbers on the terminal block of indoor and outdoor units. (Connective cable sheath length to be removed and insert into the terminal block.)
3. To prevent the ingress of water, from a loop of the connective cable as illustrated in the installation diagram of indoor and outdoor units.
4. Insulate unused cords (conductors) with PVC-tape. Process them so they do not touch any electrical or metal parts.

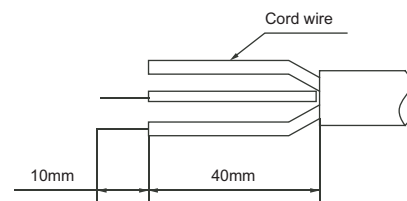


Fig.10-5



CAUTION

Wrong wiring connections may cause some electrical parts to malfunction.

11. TEST OPERATION

- 1 The test operation must be carried out after the entire installation has been completed.
- 2 Please confirm the following points before the test operation:
 - The indoor unit and outdoor unit are installed properly.
 - Tubing and wiring are correctly completed.
 - The refrigerant pipe system is leakage-checked.
 - The drainage is unimpeded.
 - The heating insulation works well.
 - The ground wiring is connected correctly.
 - The length of the tubing and the added stow capacity of the refrigerant have been recorded.
 - The power voltage fits the rated voltage of the air conditioner.
 - There is no obstacle at the outlet and inlet of the outdoor and indoor units.
 - The gas-side and liquid-side stop valves are both opened.
 - The air conditioner is pre-heated by turning on the power.
- 3 According to the user's requirement, install the remote controller frame where the remote controller's signal can reach the indoor unit smoothly.

4 Test operation

- Set the air conditioner under the mode of "COOLING" with the remote controller, and check the following points. If there is any malfunction, please resolve it according to the chapter "Troubleshooting" in the "Owner's Manual".
 - 1) The indoor unit
 - a. Whether the switch on the remote controller works well.
 - b. Whether the buttons on the remote controller works well.
 - c. Whether the air flow louver moves normally.
 - d. Whether the room temperature is adjusted well.
 - e. Whether the indicator lights normally.
 - f. Whether the temporary buttons works well.
 - g. Whether the drainage is normal.
 - h. Whether there is vibration or abnormal noise during operation.
 - i. Whether the air conditioner heats well in the case of the HEATING/COOLING type.
 - 2) The outdoor unit
 - a. Whether there is vibration or abnormal noise during operation.
 - b. Whether the generated wind, noise, or condensed of by the air conditioner have influenced your neighborhood.
 - c. Whether any of the refrigerant is leaked.



CAUTION

A protection feature prevents the air conditioner from being activated for approximately 3 minutes when it is restarted immediately after shut off.

■ Table 10-1


MODEL		12 (with 1-PHASE OUTDOOR UNIT)	18-24 (with 1-PHASE OUTDOOR UNIT)	30-48 (with 1-PHASE OUTDOOR UNIT)	36-48 (with 3-PHASE OUTDOOR UNIT)
INDOOR UNIT POWER	PHASE	1-PHASE	1-PHASE	1-PHASE	1-PHASE
	FREQUENCY AND VOLT	220-240V~, 50Hz	220-240V~ 50Hz / 220V~ 60Hz	220-240V~ 50Hz / 220V~ 60Hz	220-240V~ 50Hz
	POWER WIRING (mm ²)	3×2.0	3X1.0	3X1.0	3X1.0
	CIRCUIT BREAKER (A)	20	15	15	15
OUTDOOR UNIT POWER	PHASE	———	1-PHASE	1-PHASE	3-PHASE
	FREQUENCY AND VOLT	———	220-240V~ 50Hz / 220V~ 60Hz	220-240V~ 50Hz / 220V~ 60Hz	380-415V~ 50Hz
	POWER WIRING (mm ²)	2.0	3X2.5	3X2.5	5X2.5
	CIRCUIT BREAKER (A)	———	30	40	30
INDOOR/OUTDOOR CONNECTION WIRING (WEAK ELECTRIC SIGNAL) (mm ²)		———	3X0.5	3X0.5	3X0.5
INDOOR/OUTDOOR CONNECTION WIRING (STRANG ELECTRIC SIGNAL) (mm ²)		4×2.0	———	———	———



CAUTION


The power cord type designation is H07RN-F.

■ Fig.10-6

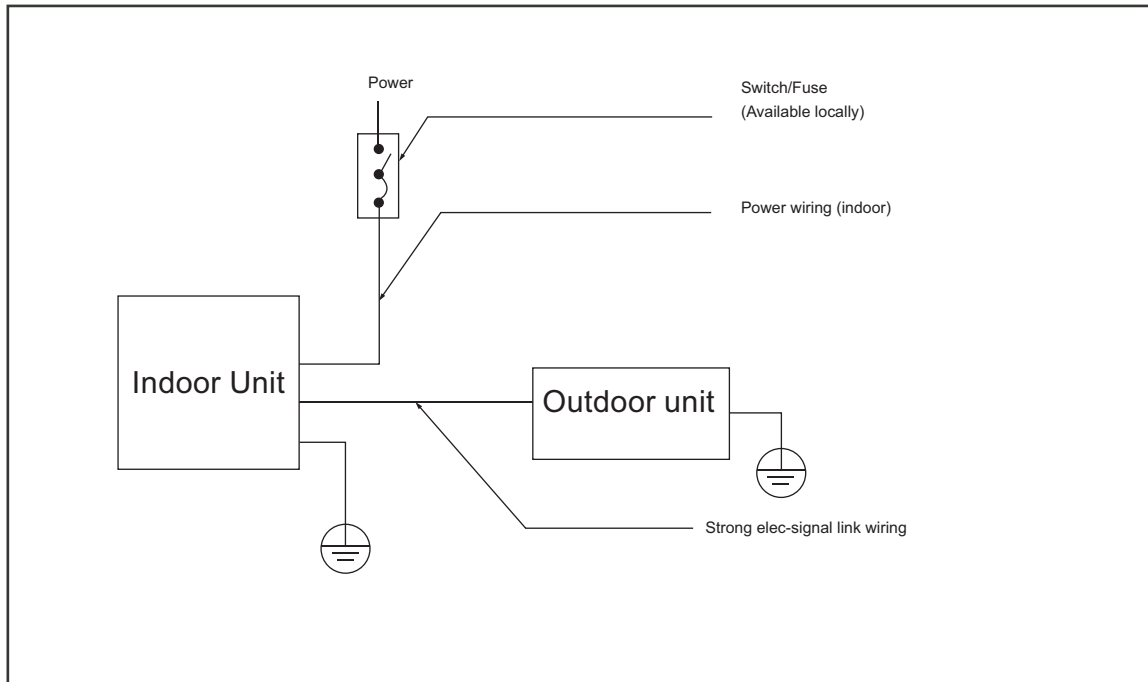


For model 12 (with 1-Phase outdoor unit)

■ Fig.10-7

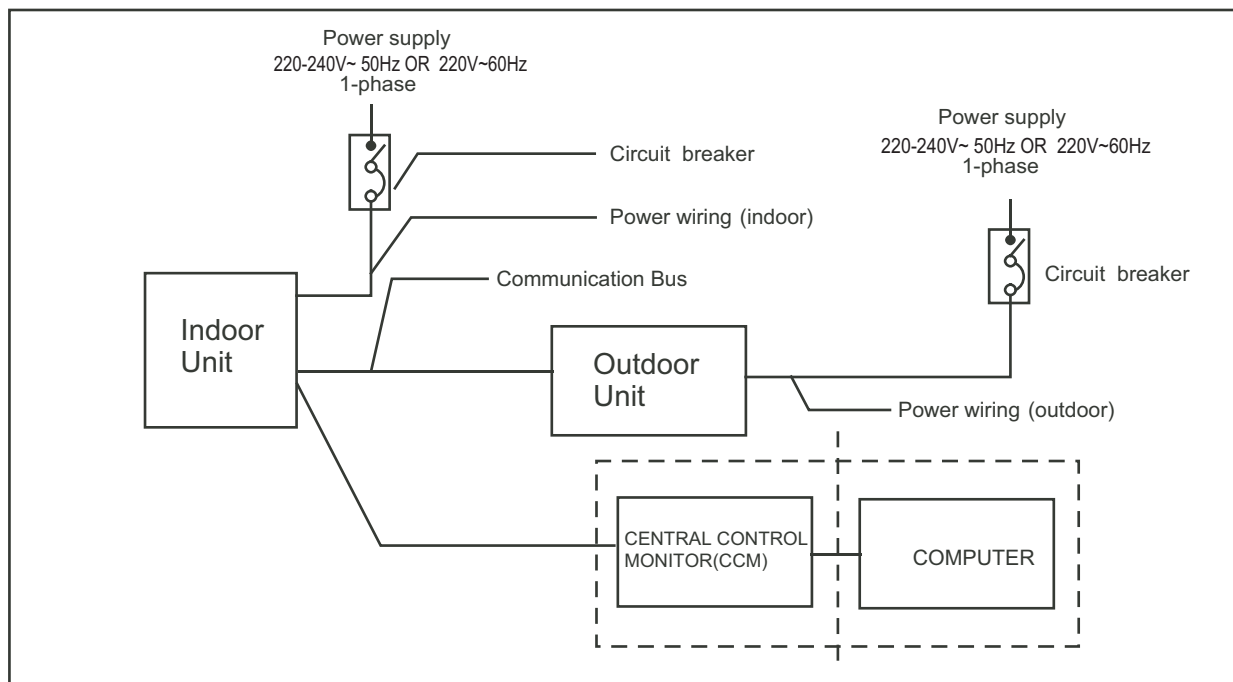

For model 18-48 (with 1-Phase outdoor unit)

■ Fig.10-8

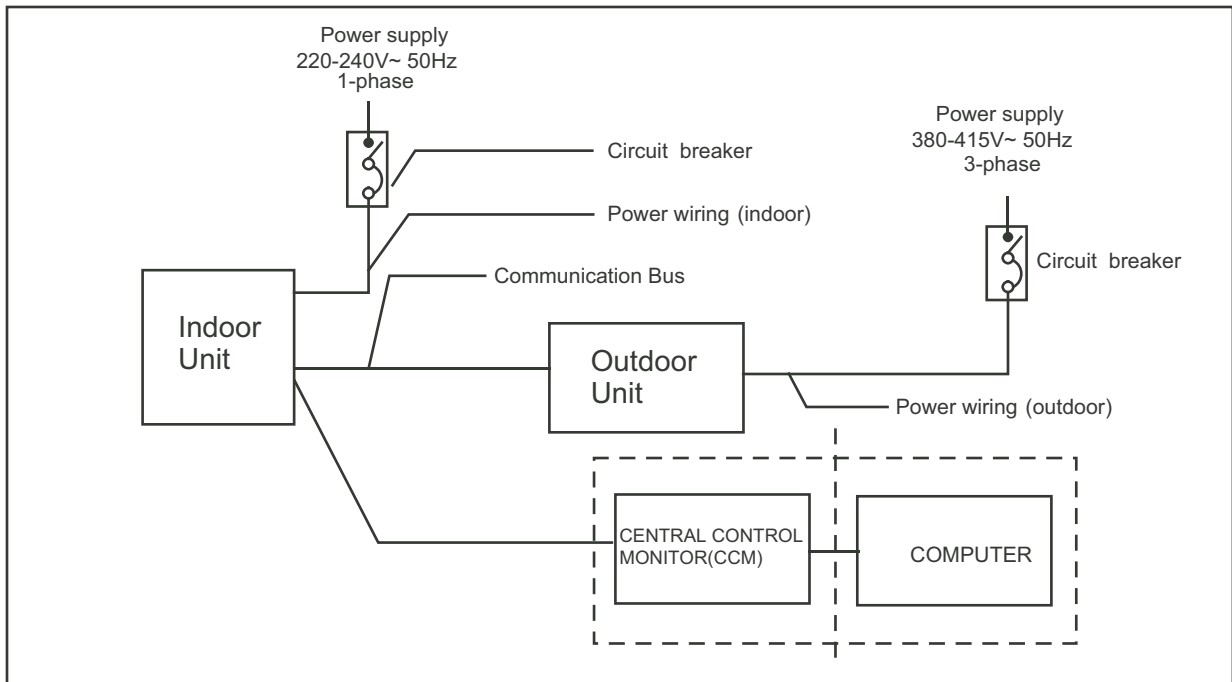


For model 36-48 (with 3-Phase outdoor unit)



CAUTION

The wiring diagram of the air-conditioner are shown as follows. When wiring, please choose the corresponding figure, or it may cause damage.

■ Fig.10-9

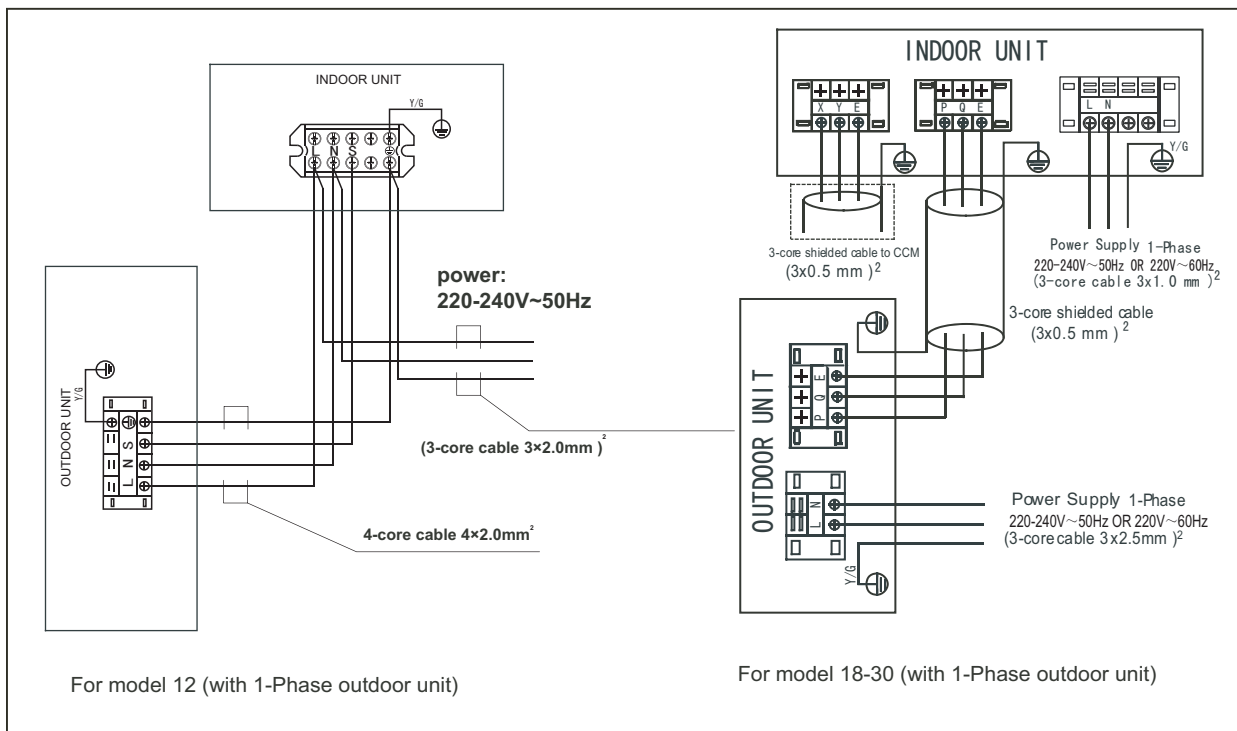


For model 12 (with 1-Phase outdoor unit)

For model 18-30 (with 1-Phase outdoor unit)


Air Condition Link-Circuit

■ Fig.10-10

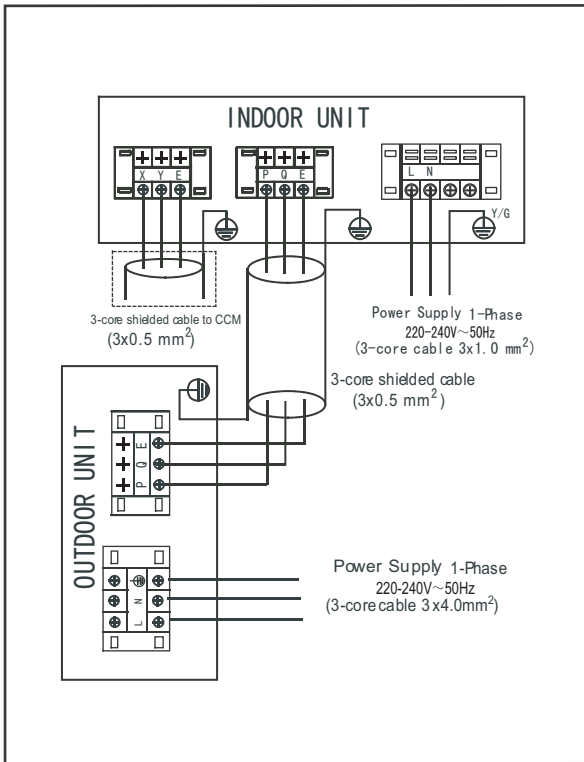


For model 36-48 (with 1-Phase outdoor unit)

■ Fig.10-11

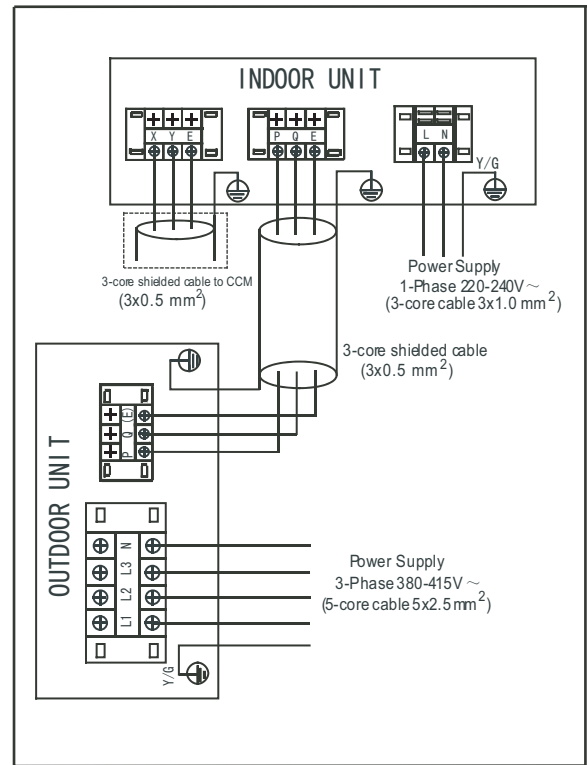

For model 36-48 (with 3-Phase outdoor unit)

■ Fig.10-11

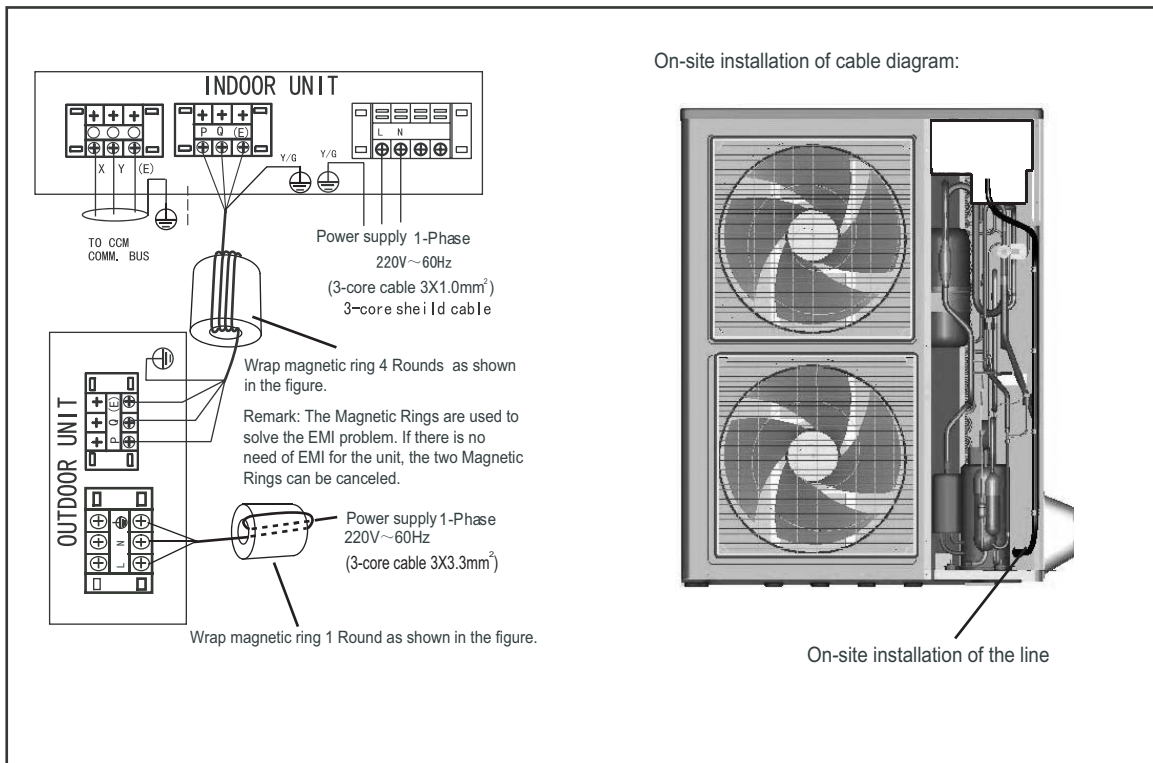

For model 36(with 1-Phase outdoor unit)